

Manual

Sieving machine Minor 200



Original



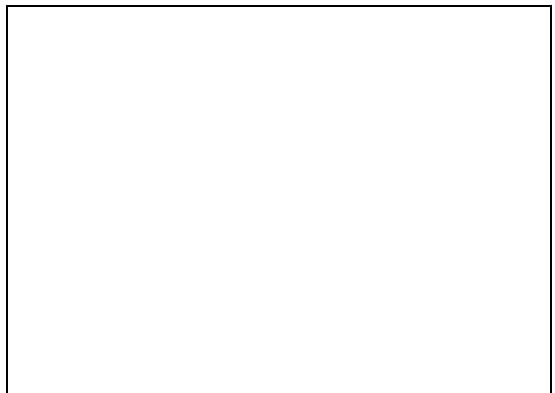

Copyright

© Copyright by
Endecotts Limited
Parsons Lane, Hope
Hope Valley, S33 6RB
England

Table of Contents

1	Notes on the manual	6
1.1	Disclaimer	6
1.2	Copyright.....	6
1.3	Explanation of signs and symbols	7
1.4	Explanations of the Safety Instructions	7
2	Safety	9
2.1	Use of the Device for the Intended Purpose.....	9
2.2	Improper use.....	10
2.3	Obligations of the operating company	10
2.3.1	Provisions	10
2.3.2	Personnel.....	10
2.3.3	Workstation and device	11
2.3.4	Qualification of personnel	11
2.3.5	Personal protective equipment (PPE)	11
2.4	Structural modifications and repairs	12
2.5	Safety equipment.....	12
2.6	Emergencies	13
2.6.1	Switching the device off in an emergency	13
2.6.2	Putting the device back into service following a fault or unexpected interruption	13
2.7	Preventing risks during normal operation	13
2.8	Avoiding damage to property.....	14
2.9	Confirmation Form for the Managing Operator.....	15
3	Sieving machine Minor 200	16
3.1	Principle of Operation	16
3.2	Technical data	17
3.3	Receptacle Volume.....	18
3.4	Feed Particle Size.....	19
3.5	Emissions.....	19
3.6	Views of the device	21
3.6.1	Front.....	21
3.6.2	Back	22
3.7	Description of the type plate	23
4	Packaging, Transport and Installation	24
4.1	Accessories included with delivery	24
4.2	Packaging	24
4.3	Transport.....	24
4.4	Temperature Fluctuations and Condensation	25
4.5	Conditions for the Installation Site	25
5	First Commissioning.....	27
5.1	Electrical Connection	27
5.2	Connecting the device to the power supply.....	28
5.3	Installation of Sieve Clamping Unit.....	29
6	Operating the Device	31
6.1	Switching On / Off.....	32
6.2	Selection of the Test Sieves	33
6.3	Performing a Test Sieving Operation	33
7	Controlling the Device	34
7.1.1	Start Process	34
7.1.2	Stop Process	34
7.2	Time	35
8	Cleaning, Wear and Maintenance	36



8.1	Cleaning.....	36
8.1.1	Cleaning the outside of the device	37
8.1.2	Cleaning of Test Sieves	37
8.1.2.1	Cleaning of Test Sieves with Mesh Sizes > 500 µm	37
8.1.2.2	Cleaning of Test Sieves with Mesh Sizes < 500 µm	37
8.1.2.3	Drying of Test Sieves.....	37
8.2	Wear	38
8.2.1	Wear test sieves and sealing gaskets	38
8.2.2	Replacing the Fuses	38
8.3	Maintenance	39
8.4	Returning for repair and maintenance	39
9	Accessories	40
9.1	Test Sieves	40
9.1.1	Certificate.....	41
9.1.2	Calibration and Inspection Service	41
9.2	Sieving Aids	41
9.3	Add-on Weight	42
10	Disposal.....	43
11	Index	45





1 Notes on the manual

This manual provides technical guidelines for the safe operation of the device. Read this manual through carefully before installing, putting into service and operating the device. Reading and understanding this manual is essential for handling the device safely and as intended.

This manual does not contain any repair instructions. Please contact your supplier or contact Endecotts Limited directly if anything is unclear or you have questions about these guidelines or the device, or in the case of any faults or necessary repairs.

You can find further information about your device at <http://www.endecotts.com> on the pages for the specific device concerned.

Amendment status:

The document amendment 0001 of the "Sieving machine Minor 200" manual has been prepared in accordance with the Directive of Machinery 2006/42/EC and the Supply of Machinery (Safety) Regulations 2008.

1.1 Disclaimer

This manual has been prepared with great care. We reserve the right to make technical changes. We assume no liability for personal injuries resulting from the failure to follow the safety information and warnings in this manual. No liability will be assumed for damage to property resulting from the failure to follow the information in this manual.

1.2 Copyright

This document or parts of it or its content may not be reproduced, distributed, edited or copied in any form without prior written permission of Endecotts Limited. Damage claims shall be asserted in the case of infringements.

1.3 Explanation of signs and symbols

In this document the following **signs and symbols** are being used:

Signs and symbols	Meaning
①	Indicates a recommendation and/or important information.
Bold type	Indicates an important term.
(A), (B), (C) (1), (2), (3)	The relevant components are labelled with letters or numbers in the instructions for better orientation.
•	List of equivalent points.
•	
•	
-	List of equivalent points.
-	
-	
1. (...) 2. (...) 3. (...)	Actions in an instruction.
➔	Result of an action.



The **Endecotts Minor 200 sieving machine** is usually described in the explanations in this Manual as **device**.

1.4 Explanations of the Safety Instructions

The following **warnings** in this manual warn of possible risks and damage:

 **DANGER**

Risk of fatal injuries

Source of danger

- Possible consequences if the danger is ignored.
- **Instructions and information on how to avoid the risk.**

D1.0000

Fatal or serious injuries may result if the “Danger” sign is disregarded. There is a **very high risk** of a life-threatening accident or lasting personal injury. The signal word **⚠ DANGER** is additionally used in the running text or in instructions.

 **WARNING**

Risk of life-threatening or serious injuries

Source of danger

- Possible consequences if the danger is ignored.
- **Instructions and information on how to avoid the risk.**

W1.0000

Life-threatening or serious injuries may result if the “Warning” sign is disregarded. There is an **increased risk** of a serious accident or of a possibly fatal personal injury. The signal word **⚠ WARNING** is additionally used in the running text or in instructions.

⚠ CAUTION

C1.0000

Risk of injuries

Source of danger

- Possible consequences if the danger is ignored.
- **Instructions and information on how to avoid the risk.**

Average to slight injuries may result if the “Caution” sign is disregarded. There is an average or slight risk of an accident or personal injury. The signal word **⚠ CAUTION** is additionally used in the running text or in instructions.

NOTICE

N1.0000

Type of damage to property

Source of the damage to property

- Possible consequences if the information is ignored.
- **Instructions and information on how to avoid the damage to property.**

Damage to property may result if the information is disregarded. The signal word **NOTICE** is additionally used in the running text or in instructions.

2 Safety

CAUTION

C2.0002

Risk of injury

Lack of knowledge of the manual

- The manual contains all safety-related information. Disregarding the manual can therefore lead to injuries.
- **Read the manual carefully before operating the device.**



Target group:

The Sieving machine Minor 200 is intended for use in the preparation of samples in a laboratory environment. This Manual is therefore directed at those working with this device in such an environment, who already have experience using similar equipment.

This device is a modern, efficient, cutting-edge product from Endecotts Limited. If used correctly and with knowledge of this technical documentation, it can be operated safely.

2.1 Use of the Device for the Intended Purpose

This sieving machine of Endecotts Limited is a laboratory device. It is suitable for dry sieving of free flowing, disperse materials in the particle size range from 38 µm to 125 mm.

The device is designed for stationary operation in a dry and clean working environment.

As a laboratory device, the sieving machine Minor 200 may only be used to prepare samples. The device is not a production machine. The laboratory device has been designed for an 8-hour, single shift operation at 30 % duty cycle.

The operating company and operating staff must have read the Manual and be familiar with the entire functional scope of the device.

The particle size distribution of soils, building materials, chemicals, fertilizers, fillers, powders, coffee, plastics, flour, metal powders, minerals, nuts, seeds, sand, washing powder, cement clinker and many other substances can be easily and quickly analysed.

The sieving machines of Endecotts Limited are successfully deployed in almost all areas of industry and research within the scope of quality control, especially where there are high demands regarding easy operability, speed, precision and reproducibility.

The Minor 200 is specially designed for test sieves with an outer diameter from 100 mm to 203 mm or 3" to 8". For an optimum measurement result it is recommended to exclusively use test sieves from Endecotts Limited.

2.2 Improper use

The device may only be used as intended.

Uses other than those described under intended use are deemed to be improper.

The Minor 200 is **not** suitable for wet sieving.

The Minor 200 is **not** suitable for sieving sample materials that can form explosive air mixtures.

Damage claims in any form for damage to property and personal injuries that result from improper use and/or the failure to follow the safety information shall be ruled out.

2.3 Obligations of the operating company

2.3.1 Provisions

The user bears responsibility for ensuring that people working with the device and the corresponding equipment have taken note of and understood all relevant safety regulations.

2.3.2 Personnel

- Ensure that only skilled personnel are deployed who, due to their training and experience, are qualified to recognise risks and avoid potential hazards.
- Personnel should be instructed regularly on handling the device, particularly in the occurrence of sudden events.
- Trainee personnel should only be allowed to work on the device when supervised by qualified skilled personnel.
- Check the safety awareness of staff regularly.
- Define responsibilities of personnel according to qualification and job description.
- Provide personnel with personal protective equipment (PPE).
- Ensure that the following prerequisites have been met:
 - Personnel have read and understood this Manual, and in particular the chapter on “Safety”.
 - Personnel know and follow the pertinent accident prevention and safety regulations.
 - Personnel wear the designated personal protective equipment (PPE) when working with the device.

2.3.3 Workstation and device

- Place the device on a vibration-free, plane, stable and clear surface
- All signs on the device must be maintained in a legible state.
- Ensure that all checks and maintenance work prescribed in this Manual are carried out.

2.3.4 Qualification of personnel

Work/operating phase	Qualification
Transport Installation Commissioning Operation Controlling Servicing Disposal	Qualified employee who has been trained in the safe use of the device.
Work on the electrical equipment on the device	Electrician who, on the basis of his/her training, knowledge and experience is able to evaluate the work assigned and recognise potential hazards.

2.3.5 Personal protective equipment (PPE)

Work/operating phase	Personal protective equipment (PPE)
Transport Installation	Safety footwear
Commissioning Installation of additional equipment Servicing	No PPE needed.
Disposal	Safety footwear
Normal operation (operation and control)	No PPE needed.

2.4 Structural modifications and repairs

CAUTION

C3.0015

Risk of injury

Improper modifications to the device

- Improper modifications to the device can result in injuries.
- **Do not make any unauthorised changes to the device.**
- **Only use the spare parts and accessories approved by Endecotts Limited!**

This manual does not contain any repair instructions. For safety reasons, repairs may only be carried out by Endecotts Limited or an authorised representative or by qualified service technicians.

In case of repair, please inform...

- ...the Endecotts Limited representative in your country,
- ...your supplier, or
- ...Endecotts Limited directly.

Service address:

Distributors affix alternative address/
contact details here

2.5 Safety equipment

Emergency stop switch

The device is not fitted with a pre-installed emergency stop switch. In an emergency, the device must be switched off by pressing the main switch or by disconnecting the device from the power supply.

Fuse (Fuse holder)

The fuse is a ceramic fuse. It is important that the recommended current rating is not exceeded and the fuse is replaced with the same type and size. If the fuse blows after replacement, then a fault exists in the equipment which must be rectified.

2.6 Emergencies

The device can be switched off at any time by the main switch at the back of the device.

2.6.1 Switching the device off in an emergency

Perform the following steps if there is a fault or unexpected interruption to operation:

1. Switch the device off by the main switch on the back of the device and disconnect it from the power supply.
2. Have the fault rectified.

2.6.2 Putting the device back into service following a fault or unexpected interruption

→ Fault has been rectified.

1. Connect the device to the power supply again
2. Switch the device on by the main switch on the back of the device.

2.7 Preventing risks during normal operation

Disregarding the following safety instructions constitutes improper and represents a risk to personnel and a risk to operational reliability.

Transport and installation

- Wear safety shoes when transporting and installing the device.
- Only connect the device to sockets with protective earth conductor (PE).
- When connecting the device, the values on the type plate must correspond to those for the power connection.

Operation

- Read the Manual before putting the device into service.
- Only operate the device where it can stand securely on a sufficiently large workstation.
- Check the mains lead for damage before operation.
- Never operate the device if damage is visible or suspected.
- Only operate the device in line with the technical application limits.
- Do not wear loose items of clothing and tie long hair back when operating the device.
- Prepare for limited communication while operating the device.
- Do not operate the device in potentially explosive atmospheres.
- Take note of the safety data sheets for samples and follow instructions by taking appropriate action in advance.
- Do not sieve any explosive and/or flammable materials.
- Do not sieve any materials which can become explosive and/or flammable during sieving.
- Be aware of surroundings during sieving because background noise makes it difficult to discern acoustic signals.

Maintenance and repair

- Switch the device off by the main switch before maintenance work.
- Do not clean the device with running water.
- Do not clean the device with compressed air.
- Have all repairs to the device carried out by the device manufacturer or an authorised representative.

2.8 Avoiding damage to property

- Observe the specifications for the maximum load of the machine.
- Handle test sieves with care.
- When filling the sieves, adhere to the specified maximum feed quantities and feed sizes. Too large a filling quantity or task size can damage the sieve and lead to a falsification of the result.
- Use a damp cloth for cleaning.
- Do not use any solvent or aggressive cleaning agent when cleaning.
- Only use original spare parts for servicing.
- Clean the sieves after each use to avoid corrosion of the sieve.

2.9 Confirmation Form for the Managing Operator

This manual contains essential instructions for operating and maintaining the device which must be strictly observed. It is essential that they be read by the user and by the qualified staff responsible for the device before the device is commissioned. This manual must be available and accessible at the place of use at all times.

The user of the device herewith confirms to the managing operator (owner) that he has received sufficient instructions about the operation and maintenance of the system. The user has received the manual, has read and taken note of its contents and consequently has all the information required for safe operation and is sufficiently familiar with the device.

The managing operator should for legal protection have the user confirm the instruction about the operation of the device.

I have read and taken note of the contents of all chapters in this manual as well as all safety instructions and warnings.

User

Surname, first name (block letters)

Position in the company

Place, date and signature

Managing operator or service technician

Surname, first name (block letters)

Position in the company

Place, date and signature

3 Sieving machine Minor 200

The Minor 200 from Endecotts Limited is a laboratory device used to sieve samples.

The device is suitable for dry sieving in the particle size range from 38 µm to 125 mm.

Due to the effective sieving process the Minor 200 guarantees gentle sieving of samples for analysis in a very short time.



Fig. 1: The sieving machine Minor 200

3.1 Principle of Operation

The Minor 200 performs a vibratory sieving operation, where the sample material is thrown upwards by the vibrations of the sieve bottom and subsequently falls back down onto the sieve mesh fabric due to gravitation forces. Thereby, the sample material is subjected to a vertical movement. In this process, the particles perform free rotations and are compared with the mesh sizes when falling back down statistically orientated. In the sieving machine of Endecotts Limited, an electromagnetic drive sets a spring-mass system in motion and transfers the oscillations to the sieve stack.

NOTICE

N2.0007

Range of application of the device

Long-term operation

- This laboratory device is designed for eight-hour single-shift operation with a duty cycle of 30 %.
- **This device may not be used as a production machine nor is it intended for continuous operation.**

3.2 Technical data

General information	
Applications	For dry sieving
Area of application	Agriculture, biology, chemicals, plastics, building materials, engineering, electrical engineering, environment, foodstuffs, geology, metallurgy, glass, ceramics, medicine, pharmaceuticals
Feed material	Hard, medium-hard, soft, brittle, elastic, fibrous
Specifications	
Drive / sieving motion	Electromagnetic (throw with vertical momentum)
Suitable for dry sieving	Yes
Suitable for wet sieving	No
Operation	Rotary switch
Range	38 µm to 125 mm
Max. sample quantity	3 kg
Max. sieve stack weight	4 kg
Max. payload	7 kg
Max. sieve stack height	410 mm
Max. number of fractions	8 full height / 16 half height (200 mm or 8")
Suitable sieve diameter	100 / 200 mm or 3" / 8"
Clamping device	Clamping belt system (included)
Model	Bench top
Time setting	Analogue, 0 – 60 min or continuously
Dimensions Ø x H	262 x 126 mm
Required floor space (W x D)	350 mm x 450 mm
Weight (without sieve stack and clamping device)	16 kg
Conformity	CE, UKCA

Electrical specifications

Power connection	230 V, 50 Hz, 1-phase 230 V, 60 Hz, 1-phase 100 V, 50 Hz, 1-phase 110 V, 60 Hz, 1-phase
Power consumption	~120 VA
Amplitude	Approx. 1.6 mm fixed (depending on load)
Degree of protection	IP20
Electromagnetic compatibility (EMC)	EMC class B according to DIN EN 55011 and IEC CISPR 11. Strong electromagnetic interference fields, such as high-power radio transmitters, can have an adverse influence on the amplitude control of the Minor 200. Once the source of the interference is eliminated, the Minor 200 will return to normal operation by itself.

3.3 Receptacle Volume

The maximum volume of material depends on various factors such as number and aperture size of the test sieves, maximum particle size and width of distribution of the sample material.

Nominal width of aperture (200 mm diameter)	Recommended sample volume according to ISO 2591-1	Max. volume of sample residue after the completion of sieving according to ISO 2591-1
22.4 mm	1600 cm ³	800 cm ³
16 mm	1000 cm ³	500 cm ³
11.2 mm	800 cm ³	400 cm ³
8 mm	500 cm ³	250 cm ³
5.6 mm	400 cm ³	200 cm ³
4 mm	350 cm ³	175 cm ³
2.8 mm	240 cm ³	120 cm ³
2 mm	200 cm ³	100 cm ³
1.4 mm	160 cm ³	80 cm ³
1 mm	140 cm ³	70 cm ³
710 µm	120 cm ³	60 cm ³
500 µm	100 cm ³	50 cm ³
355 µm	80 cm ³	40 cm ³
250 µm	70 cm ³	35 cm ³
180 µm	60 cm ³	30 cm ³
125 µm	50 cm ³	25 cm ³
90 µm	42 cm ³	21 cm ³
63 µm	35 cm ³	17 cm ³
45 µm	30 cm ³	15 cm ³
32 µm	26 cm ³	13 cm ³
25 µm	22 cm ³	11 cm ³

3.4 Feed Particle Size

Traditional dry sieving is performed in the particle size range of 40 µm to 125 mm. The maximum feed particle size depends on the sample material, the number and aperture size of the test sieves and the type of the sieving machine.

Nominal of aperture (200 mm diameter)	Approx. size of largest particle
25 mm	95 mm
4 mm	26 mm
1 mm	10 mm
250 µm	3.8 mm
45 µm	1.2 mm

3.5 Emissions

CAUTION

C4.0011

Possibility of acoustic signals not being heard

Loud sieving noises

- Possible acoustic alarms and voice communication might not be heard.
- Consider the volume of the sieving noise in relation to other acoustic signals in the work environment. Additional visual signals may be used.

CAUTION

C5.0017

Hearing damage

A high sound level may be generated depending on the type of material, the number of sieves, the sieving aid used, the amplitude set and the duration of the sieving



- Excessive noise in terms of level and duration can cause impairments or permanent damage to hearing.
- Ensure suitable noise protection measures are taken or wear ear protection.

Sound parameters:

The sound parameters are also influenced by the set amplitude, the number of test sieves and the properties of the sample material.

Example 1

Number of test sieves:	5
Amplitude:	1.5 mm
Feed material:	Quartz sand (< 1 mm)

At these operating conditions, the workplace related equivalent continuous sound level $L_{eq} = 51$ dB(A).

Example 2

Number of test sieves:	5
Amplitude:	3 mm
Feed material:	Quartz sand (< 1 mm)

At these operating conditions, the workplace related equivalent continuous sound level $L_{eq} = 61$ dB(A).

3.6 Views of the device

3.6.1 Front

i The labelling of components with letters in the following views of the device is fixed and is used in further figures of components in the Manual.

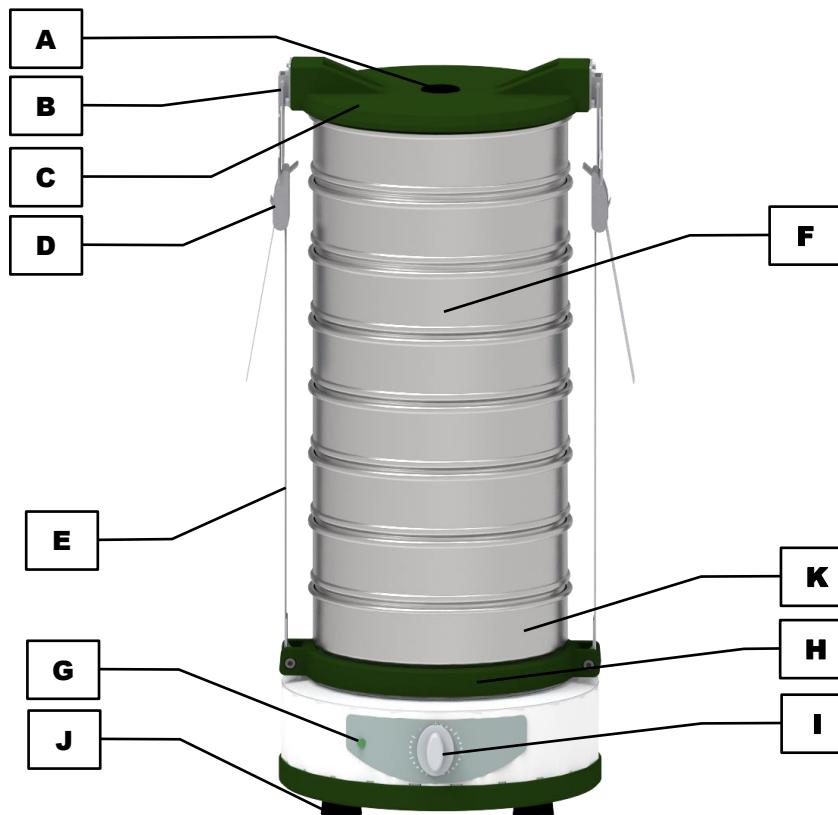


Fig. 2: Front view of the device

Element	Description	Function
A	Plug	Removable knob for lid.
B	Clamping latch	Fixes the sieve stack (F) together with the clamp plate (C) and the location plate (H).
C	Clamp plate	Covers the top test sieve and fixes the sieve stack (F).
D	Adjustable cam buckles	Tensioned the strap (E) for fixing the sieve stack (F).
E	Strap	Connection between adjustable cam buckles (D) and device.
F	Sieve stack	Selection of sieves to sieve samples.
G	L.E.D.	Indicates mains power to the device. L.E.D is illuminated when the IEC connector is pushed fully into the inlet and power is switched on at the local outlet.
H	Location plate	Place for receiver (K) and sieve stack (F).
I	Process timer and on / off switch	Mechanical, 0-60 min. or continuous operation.

J	Anti-vibration feet	To dampen vibrations (oscillations), shocks and contributes to noise reduction.
K	Receiver	A pan which fits snugly beneath a sieve to receive the whole of the passing sample.

3.6.2 Back



Fig. 3: Back view of the device

Element	Description	Function
L	Mains switch	Switches the device on and off, disconnects the device from the mains.
M	Mains connection	Connection for the power cable.
N	Fuse drawer	Contains the fuses protecting against overvoltage.
O	Type plate	Lists, among others, the voltage type, the serial number and the type of the device.
P	Power warning	Caution – Beware of electric shock! The housing of the device may only be opened by trained personnel. Pull the power plug out before opening.
Q	Read operating manual carefully	Safety notice: The operating manual of the device must be read carefully before commissioning and operation.

3.7 Description of the type plate

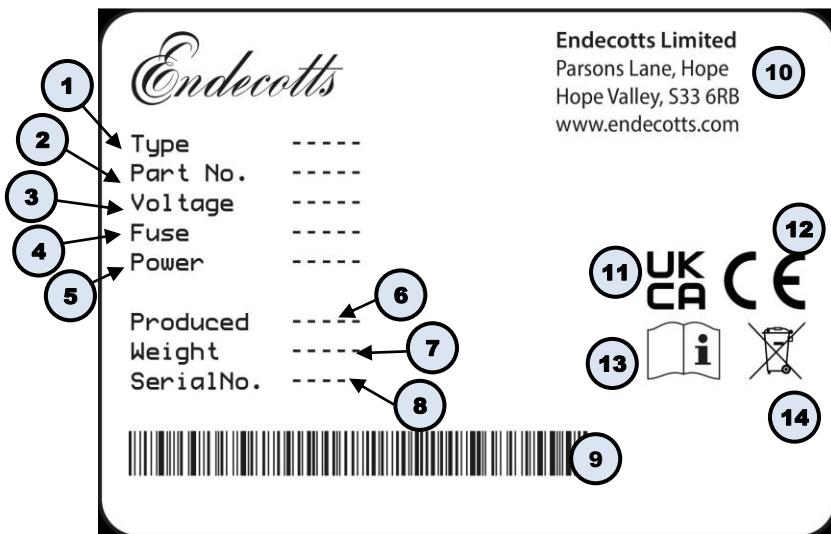


Fig. 4: Type plate

- 1 Device designation
- 2 Part number
- 3 Power version, Mains frequency
- 4 Fuse type and fuse strength
- 5 Capacity, Amperage
- 6 Year of production
- 7 Weight
- 8 Serial number
- 9 Bar code
- 10 Manufacturer's address
- 11 UKCA marking
- 12 CE marking
- 13 Safety warning: Read the manual
- 14 Disposal label

① In the case of queries please provide the device designation (1) or part number (2), as well as the serial number (8) of the device.

4 Packaging, Transport and Installation

4.1 Accessories included with delivery

Minor 200 (item number dependent on voltage selected)

Item No: MIN200/10050

Item No: MIN200/11060

Item No: MIN200/23050

Item No: MIN200/23060

Plate clamp assembly

Item No: ZMMIN-CLA1

Strap (white) with buckle

Item No: ZMMIN-STR2

Latch (toggle) s/steel

Item No: ZMMIN-LAT1

4.2 Packaging

The packaging has been adapted to the mode of transport. It complies with the generally applicable packaging guidelines.

NOTICE

N3.0001

Complaint or return

Keeping the packaging

- Inadequate packaging and insufficient securing of the device can jeopardise the warranty claim in the event of a complaint or return.
- **Keep the packaging for the duration of the warranty period.**

4.3 Transport



CAUTION

C6.0000

Risk of injury caused by the device falling

Incorrect transport of the device

- Due to its weight, the device can cause injuries if it falls.
- **Wear safety shoes during transport.**

NOTICE

N4.0017

Damage to components

Transport

- Mechanical or electronic components may be damaged during transport.
The device must not be knocked, shaken or thrown during transport.
- **Move the device gently during transport.**

NOTICE

N5.0014

Complaints

Incomplete delivery or transport damage

- The forwarding agent and Endecotts Limited must be notified immediately in the event of transport damage. It is otherwise possible that subsequent complaints will not be recognised.
- **Please check the delivery on receipt of the device for its completeness and intactness.**
- **Notify your forwarding agent and Endecotts Limited within 24 hours.**

4.4 Temperature Fluctuations and Condensation

NOTICE

N6.0016

Damaged components due to condensation

Temperature fluctuations

- The device may be exposed to substantial fluctuations in temperature during transport. The ensuing condensation can damage electronic components.
- **Wait until the device has acclimatised before putting it into service.**

Temporary storage:

In case of an interim storage the device must be stored dry and within the specified ambient temperature range.

4.5 Conditions for the Installation Site

⚠ CAUTION

C7.0047

Risk of injury caused by the device falling

Incorrect installation of the device

- Due to its weight, the device can cause injuries if it falls.
- **Only operate the device on a sufficiently large, strong and stable workstation.**
- **Ensure that all of the device feet are securely supported.**

NOTICE

N7.0021

Ambient temperature

Temperatures outside the permitted range

- Electronic and mechanical components may be damaged.
- The performance data alters to an unknown extent.
- **Do not exceed or fall below the permitted temperature range (5 °C to 40 °C ambient temperature) of the device.**

NOTICE

N8.0004

Setting up the device

Vibrations during operation

- Depending on the operating mode of the device, slight vibrations may occur.
- **Set up the device only on a vibration-free, plane and stable surface.**
- Installation height: max. 2 000 m above sea level
- Ambient temperature: 5 °C – 40 °C
- Width of the base: 350 mm
- Depth of the base: 350 mm
- No safety clearances required

Location requirements:

The device must be placed on a vibration-free, plane, stable and clear surface to avoid transmission of vibrations. A level base ensures the uniform distribution of the sample over the sieve mesh fabric, as well as the stability of the device.

- Maximum relative humidity < 80 % (at ambient temperatures ≤ 31 °C)

For ambient temperatures U_T between 31 °C and 40 °C, the maximum relative humidity value L_F linearly decreases according to $L_F = -(U_T - 55) / 0.3$:

Ambient temperature	Max. rel. humidity
≤ 31 °C	80 %
33 °C	73.3 %
35 °C	66.7 %
37 °C	60 %
39 °C	53.3 %
40 °C	50 %

NOTICE

N9.0015

Humidity

High relative humidity

- Electronic and mechanical components may be damaged.
- The performance data alters to an unknown extent.
- **The relative humidity in the vicinity of the device should be kept as low as possible.**

5 First Commissioning

5.1 Electrical Connection

⚠ WARNING

W2.0015

Risk to life caused by an electric shock

Connection to socket without a protective earth conductor

- Connecting the device to sockets without a protective earth conductor can lead to life-threatening injuries caused by an electric shock.
- **Always operate the device using sockets with a protective earth conductor (PE).**



⚠ WARNING

W3.0002

Danger to life through electric shock

Damaged power cable

- Operating the device with a damaged power cable or plug can lead to life-threatening injuries caused by an electric shock.
- **Before operating the device, check the power cable and plug for damage.**
- **Never operate the device with a damaged power cable or plug!**



NOTICE

N10.0022

Electrical connection

Failure to observe the values on the type plate

- Electronic and mechanical components may be damaged.
- **Connect the device only to a mains supply matching the values on the type plate.**

⚠ WARNING When connecting the power cable to the mains supply, use an external fuse that complies with the regulations applicable to the place of installation.

- Check the type plate for details on the necessary voltage, frequency, and maximum external current source fuse for the device.
- The listed values must agree with the existing mains supply.
- Only use the supplied power cable to connect the device to the mains supply.

The Minor 200 must be connected to the power supply on site for initial commissioning.

Ensure the following before connecting the device to the power supply:

- The application site complies with the installation requirements.
- The device is securely and firmly in place.
- The power values for the device (type plate) correspond to the values of the power supply at the site.

5.2 Connecting the device to the power supply

Connect the device to the power supply as described below:

1. Compare the voltage and frequency on the type plate (**O**) of the device to the values on site.
2. Plug the supplied mains lead into the mains connection (**M**).
3. Plug the other end of the mains lead into a socket at the installation site.
4. Provide external fusing according to the regulations at the installation site.



Fig. 5: Connecting to the power supply

Element	Description
M	Mains connection
O	Type plate

5.3 Installation of Sieve Clamping Unit

CAUTION

C8.0012

Contusions and bruises

Overturning of the sieve stack

- The sieve stack can overturn and cause personal injury.
- **Only operate the device with a securely clamped sieve stack.**

Before first commissioning the sieve clamping unit must be installed.

The Minor 200 is suitable for test sieves of 100 mm to 203 mm outer diameter. Up to 16 fractions (15 test sieves plus receiver with a height of 25 mm), or 8 fractions (7 test sieves plus receiver with a height of 50 mm) can be clamped.

NOTICE A high number of test sieves can significantly increase the total weight of the load (sieve stack and sample material). Make sure not to exceed the maximum payload of 7 kg.

Install the Sieve Clamping Unit as described below:

1. Place the receiver (**M**) centrally on the location plate (**H**).
2. Stack the required test sieves on top of the receiver (min. 1x receiver + 2x sieves + 1x clamp plate).
3. Put the sample in the top sieve.
4. Place the clamp plate (**C**) on top of the sieve stack (**F**).
5. Raise the clamping latch lever (**B1**) upwards to expose the latch hook (**B2**).
6. While holding the clamping latch (**B**) using one hand, press the lever on the cam buckle (**D**) with the other hand. Slide the cam buckle (**D**) along the clamping strap (**E**) until it can be engaged into the latch hook (**B2**).
7. Release the cam buckle (**D**), pull the loose end of the strap downwards to partially tension the strap (**E**).

NOTICE Do not over tension. The clamping latch lever will remain in the raised position 20-30 degrees from the vertical when partially tensioned.

8. Repeat these actions for the second clamping latch.
9. Press both clamping latch levers (**B1**) down, closing the latches to clamp the sieve stack. Do not use excessive force, it may be necessary to loosen the straps slightly to secure.
10. Repeat previous action to release or increase tension in the strap as necessary to ensure stack is secured.

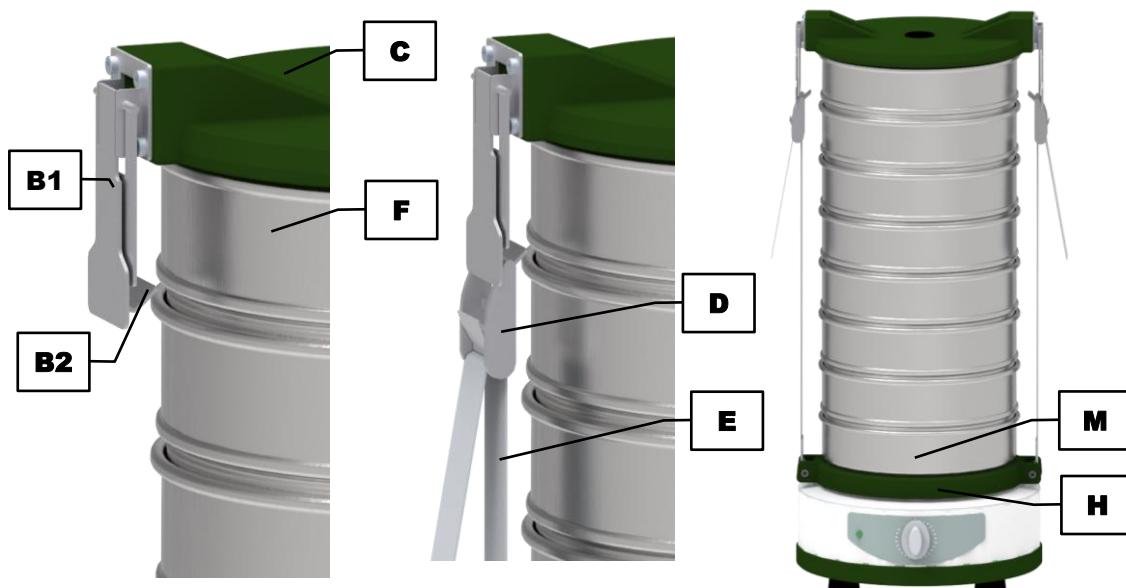


Fig. 6: Installation of clamping belt system

Element	Description
B	Clamping latch (B1+B2)
B1	Clamping latch lever
B2	Clamping hook
C	Clamp plate
D	Cam buckle
E	Clamping strap
F	Sieve stack
H	Location plate
M	Receiver

NOTICE In order to guarantee exact results under fast sieving conditions, the quantity of material to be sieved should be adapted to the sieve diameter and the nominal mesh size.

6 Operating the Device

⚠ WARNING

W4.0002

Danger to life through electric shock

Damaged power cable

- Operating the device with a damaged power cable or plug can lead to life-threatening injuries caused by an electric shock.
- **Before operating the device, check the power cable and plug for damage.**
- **Never operate the device with a damaged power cable or plug!**



⚠ CAUTION

C9.0005

Risk of injury

Potentially explosive atmosphere

- The device is not suitable for use in potentially explosive atmospheres. Operating the device in a potentially explosive atmosphere can lead to injuries caused by an explosion or fire.
- **Never operate the device in a potentially explosive atmosphere!**

⚠ CAUTION

C10.0006



Risk of injury

Sample material that is harmful to health

- Sample material that is harmful to health can injure people (illness, contamination).
- **Use suitable extraction systems with sample material that is harmful to health.**
- **Use suitable personal protective equipment with sample material that is harmful to health.**
- **Take note of the safety data sheets for the sample material.**

⚠ CAUTION

C11.0003



Risk of explosion or fire

Changing sample properties

- The properties and therefore also the hazardousness of the sample can alter during the sieving process.
- **Do not use any substances in this device which carry the risk of explosion or fire.**
- **Observe the material safety data sheets of the sample material.**

NOTICE

N11.0000

Handling of food, pharmaceutical and cosmetic products

Analysed products

- Food, pharmaceutical and cosmetic products, which were analysed with the device must not be consumed, used or circulated.
- **Dispose of these substances in accordance with the applicable regulations.**

6.1 Switching On / Off

Switch the device on as described below:

1. Make sure the device is connected to the mains power.
2. Turn on the device with the mains switch (**L**) on the back of the device.
→ The device is then ready for use.

Switch the device off as described below:

1. Switch the device off by the mains switch (**L**) on the back of the device.
→ The device is switched off.



Fig. 7: Mains switch

Element	Description
L	Mains switch

6.2 Selection of the Test Sieves

The selection of the test sieves depends on the sample quantity as well as the particle size distribution. The gradation of mesh sizes and accordingly the measurement points should be selected in such a way that the complete particle size range of the sample is covered at regular intervals. The wider the particle size range, the more test sieves should be used.

6.3 Performing a Test Sieving Operation

Performing a Test Sieving Operation as described below:

1. Determine the empty weights of the test sieves and the receiver.
2. Place the sieve stack with **increasing** mesh size on the receiver.



Each 200 mm / 8" stainless steel test sieve is provided with an O-ring, which serves as a seal to prevent dust emission during the sieving.

3. Weigh the sample and put it on the uppermost test sieve (biggest mesh size). Make sure not to exceed the maximum feed quantity.
4. Place the complete sieve stack centrally on the device and clamp the sieve stack.
5. Set the optimum sieving time.
6. Start the sieving process.
7. After the end of the sieving process, weigh the individual test sieves and the receiver including the particle size fractions present therein.
8. Determine the mass of the particle size fractions (weight after the sieving minus the respective empty weight).

7 Controlling the Device

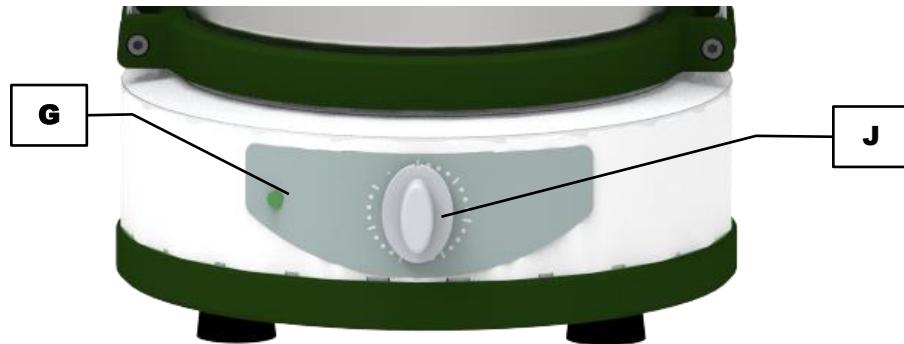


Fig. 8: Operating controls and functions

Element	Description
G	L.E.D.
I	Process timer and on / off switch

7.1.1 Start Process

Start the sieving process as described below:

1. Make sure the device is connected to mains power and the green L.E.D (G) is on.
2. Rotate the process timer (I) clockwise to increase the setting time and rotate anticlockwise to reduce the setting time.
3. The sieving process ends when the timer is up.

NOTICE The timer will commence timing down as soon as the knob is released, regardless of electrical power being connected or not.

7.1.2 Stop Process

The sieving process will stop automatically after the set process time has elapsed. However, the sieving process can be stopped manually at any time.

End the sieving process as described below:

1. Rotate the process timer (I) anticlockwise to the off position (12 o'clock).
→ The sieving process stops, the green L.E.D (G) is off.

7.2 Time

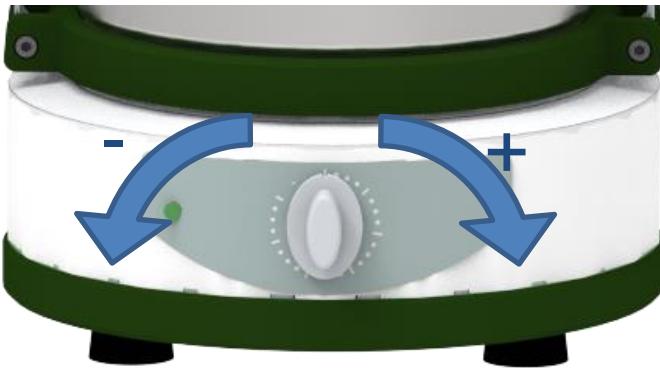


Fig. 9: Time setting for continuous operation or with a process time

The device can be operated either in continuous operation or for a certain time between 0 and 60 minutes.

Set the time as described below:

1. Make sure the device is connected to mains power and the green L.E.D. (**G**) is on.
2. To start the sieving process with a fix process time, rotate the process timer (**I**) clockwise to increase the setting time and rotate anticlockwise to reduce the setting time.
3. The sieving process ends when the timer is up.

1. OR to start the sieving process in continuous operation turn the knob anticlockwise from off position (12 o'clock) to the continuous running mark.
2. The shaker will continue running until the knob is returned to the off position.

NOTICE The timer will commence timing down as soon as the knob is released, regardless of electrical power being connected or not.

NOTICE Setting up time below 10 minutes: First you have to set the time up to 10 minutes, DO NOT RELEASE THE KNOB, and then turn it back to e.g. 5 minutes. The process will start. For any other times please set up the time to the required number and the sieving will start.

The setting of the optimum sieving time depends on the sample material. These settings have a substantial influence on the measurement result. Generally, national and international standards, internal regulations and standards provide detailed information on product-specific sieve analyses and the associated sieving parameters. If such basic information cannot be obtained, the sieving time must be determined experimentally.

The **optimum sieving time** is in accordance with DIN 66165 and ISO 2591-1_1988 achieved when less than 0.1 % of the feed quantity passes the test sieve after one minute of sieving duration. In practice, the individual test sieves are weighed after the sieving process including the respective particle size fraction. Then, the sieve stack is sieved again for one minute. The weights of the individual test sieves of the second weighing must not differ substantially from those of the first weighing.

8 Cleaning, Wear and Maintenance

This chapter contains descriptions on cleaning and servicing the device.



This Manual does not contain repair instructions. All repairs must be conducted by Endecotts Limited, an authorised representative or by Endecotts service technicians.

⚠ CAUTION

C12.0013

Risk of injury

Improper repairs

- Unauthorised and improper repairs can cause injuries.
- **Repairs to the device may only be carried out by Endecotts Limited, an authorised representative or by qualified service technicians.**
- **Do not carry out any unauthorised or improper repairs to the device!**

⚠ CAUTION

C13.0015

Risk of injury

Improper modifications to the device

- Improper modifications to the device can result in injuries.
- **Do not make any unauthorised changes to the device.**
- **Only use the spare parts and accessories approved by Endecotts Limited!**

8.1 Cleaning

⚠ WARNING

W5.0003

Risk to life caused by an electric shock

Cleaning live parts with water

- Cleaning the device with water can lead to life-threatening injuries caused by an electric shock if the device has not been disconnected from the power supply.
- **Only carry out cleaning work on the device when it has been disconnected from the power supply.**
- **Use a cloth moistened with water for cleaning.**
- **Do not clean the device under running water!**



NOTICE

N12.0009

Damage to the housing and device

Use of organic solvents

- Organic solvents may damage plastic parts and the coating.
- **The use of organic solvents is not permitted.**

8.1.1 Cleaning the outside of the device

Clean the housing of the device with a damp cloth and if necessary, with a household cleaning agent. Pay attention that no water or cleaning agent enters the interior of the device.

8.1.2 Cleaning of Test Sieves

Test sieves are measuring instruments and should be treated with due care before, during and after the sieving process. It is recommended to clean new test sieves before the first use from possible preservative residues with ethanol or isopropanol and to store them in a dry, dust-free place when unused.

Before cleaning or drying the test sieves, the O-rings have to be removed. Before using and after the cleaning the test sieves should be visibly inspected for possible damages and impurities.

Near-mesh or trapped particles can often be removed dry after the sieving process by slightly tapping the test sieve upside down with the sieve frame on a table. For test sieves with mesh sizes > 500 µm a fine hair brush can be used to sweep over the outer side of the mesh fabric.

8.1.2.1 Cleaning of Test Sieves with Mesh Sizes > 500 µm

Coarse mesh fabrics with mesh sizes > 500 µm can be cleaned dry or wet easily and effectively with a hand brush with plastic bristles (at not too high applied pressure).

8.1.2.2 Cleaning of Test Sieves with Mesh Sizes < 500 µm

Test sieves with mesh sizes < 500 µm should generally only be cleaned in an ultrasonic cleaning-bath. As a cleaning agent, water together with a standard surfactant is recommended. Cleaning in the ultrasonic bath usually takes two to three minutes. After that, the test sieves should be thoroughly rinsed with water and dried. Cleaning with strong bases or acids is generally not recommended.

8.1.2.3 Drying of Test Sieves

Drying ovens of various sizes can be used for drying test sieves (drying temperature < 80 °C).

Additional information concerning ultrasonic cleaning-baths can be found on the Endecotts Limited homepage (<http://www.endecotts.com>) as can the free expert guide - *Test Sieving Manual – A guidance to the terminology and general information for test sieves and equipment for particle analysis*.

NOTICE

N13.0028

Damage of the sieve mesh fabric

Drying temperature > 80 °C

- At higher temperatures, especially fine metal wire meshes can become warped, leading to a reduced tension of the mesh fabric inside the sieve frame and hence, makes the test sieve less efficient during the sieving process.
- The drying temperature for test sieves must not exceed 80 °C!

8.2 Wear

⚠ CAUTION

C14.0013

Risk of injury

Improper repairs

- Unauthorised and improper repairs can cause injuries.
- **Repairs to the device may only be carried out by Endecotts Limited , an authorised representative or by qualified service technicians.**
- **Do not carry out any unauthorised or improper repairs to the device!**

8.2.1 Wear test sieves and sealing gaskets

Even with the proper handling of the test sieves, a wearing of the sieve mesh fabric depending on the frequency of the sieving operation and on the sample material is unavoidable. The test sieves should be regularly checked for wear and damage and be replaced if necessary.

Likewise, all existing sealing gaskets should be checked for wear on a regular basis and replaced if necessary.

8.2.2 Replacing the Fuses

⚠ WARNING

W6.0014

Risk to life caused by an electric shock

Exposed contacts

- Replacing the fuses without pulling out the mains plug can lead to life threatening injuries caused by an electric shock on contact with the fuse holder or the live contacts on the fuse.
- **Pull out the mains plug before replacing the fuses.**



NOTICE Depending on the mains supply different fuses are used. The correct electrical protection is listed on the type plate (O).

Voltage	Fuse
100 V, 50 Hz	T 8A delay-action
110 V, 60 Hz	T 8A delay-action
230 V, 50 Hz	T 4A delay-action
230 V, 60 Hz	T 4A delay-action

Two fuses are located in the fuse drawer (N) on the back of the device. Fuses can be replaced by trained qualified personnel as described below:

1. Remove the fuse drawer by pressing the latch on the bottom side of the fuse drawer.
2. Replace the defective fuse in the fuse drawer.
3. Slide the fuse drawer back in again, until it audibly locks in place.

8.3 Maintenance

The device is maintenance-free if cleaned regularly.

8.4 Returning for repair and maintenance



Fig. 10: Return form

The acceptance of devices and accessories of Endecotts Limited for repair, maintenance or calibration can only be effected, if the return form and the decontamination declaration service has been correctly and fully completed.

Download the return form located in the download section "Miscellaneous" on the Endecotts Limited homepage (<https://www.endecotts.com/downloads/miscellaneous/>).

When returning a device, attach the return form and the decontamination declaration form to the outside of the packaging.

In order to eliminate any health risk to the service technicians, Endecotts Limited reserves the right to refuse the acceptance and to return the respective delivery at the expense of the sender.

9 Accessories

Information on available accessories as well as the respective manuals are accessible directly on the Endecotts Limited homepage (<http://www.endecotts.com>) under the heading "Downloads" of the device.

Information on wear parts and small accessories can be found in the Endecotts Limited general catalogue also available on the homepage.

In case of any questions concerning spare parts please contact the Endecotts Limited representative in your country, or Endecotts Limited directly.

9.1 Test Sieves

Critical for the accuracy and reliability of the measurement result is, in addition to the reproducible operating sieving machine the quality of the test sieve. Test sieves of Endecotts Limited are high quality measuring instruments for which only mesh fabrics and perforated sheets of the corresponding standards are used. Each test sieve is given a serial number, as well as a quality certificate after the final check.



Fig. 11: Test sieves

The different versions of the test sieves of Endecotts Limited are supplied in accordance with all current national and international standards:

- available standards: DIN, ISO, ASTM, BS, NF
- available diameters: 3" / 100 mm / 200 mm / 8" (203 mm) / 300 mm / 12" (305 mm) / 400 mm / 450 mm / 18"
- available sieve surfaces: sieve mesh fabric (20 µm to 125 mm) and perforated screens (round or square holes) of stainless steel
- on request with an individual test certificate for the inspection of measuring and testing equipment monitoring according to ISO 9000 series.

Among the various test sieves matching receivers, receivers with outlet, intermediate pans, intermediate rings, venting rings and sieve lids are available.

9.1.1 Certificate

Before delivery, each test sieve is optically surveyed according to the standards DIN ISO 3310-1 and ASTM E 11 and provided a certificate of compliance with the order.

9.1.2 Calibration and Inspection Service

As a special service Endecotts Limited offers the calibration and inspection of test sieves, documenting the measurement results in tabular and graphical form, hence representing a certificate with more detailed statistics. All relevant information is recorded during the standard measuring process of the test sieve and confirmed in the required certificate.

9.2 Sieving Aids

NOTICE

N14.0027

Damage of the sieve mesh fabric

Use of mechanical sieving aids

- When using mechanical sieving aids, there is a danger that fine sieve mesh fabrics might be damaged.
- **Ensure that no overstretching of the sieve mesh fabric occurs due to overloading with sieving aids.**
- **If in doubt, please contact your local distributor or Endecotts Limited directly.**

By electrostatic and Van-der-Waals forces, as well as by fluid bridges, single particles can combine to form agglomerates. Since in this case not the individual primary particles, but particle collectives are measured, there is a distortion of the particle size distribution (a higher coarse fraction results). In order to prevent the formation of agglomerates or dissolve them, sieving aids can be used.

Mechanical sieving aids:

Mechanical sieving aids cause a destruction of agglomerates and dislodge wedged particles from the sieve meshes. Depending on the mesh size of the test sieve and the preselected amplitude, balls of agate, rubber, steatite or cubes of polyester urethane rubber, and nylon brushes or stainless-steel chain rings can be used for this purpose.

NOTICE For very soft sample material, an undesired crushing of primary particles might occur.

Solid additives:

Solid additives, such as talcum or Aerosil® can be admixed to fatty, moist, sticky or oily sample materials. They attach themselves to the particle surface and counteract the formation of agglomerates. Their particle size is so small that they have no sustainable influence on the actual particle size analysis of the sample material. However, the measurement results will be distorted depending on the added amount of additive.

Liquid sieving aids:

Antistatic spray, benzine, alcohol and surfactants can be used as liquid sieving aids, though benzine and alcohol are only to be used during sample preparation. They reduce the electrostatic charges, wash out fatty or oily components of the sample material, or diminish the surface tension during the wet sieving operation.

9.3 Add-on Weight

If the mass of the sieve stack is too low, the necessary amplitude required for the sieve analysis cannot always be reached. To compensate for this we offer as an additional extra, a plate which can be placed underneath the sieve stack and be clamped together with the sieve stack during operation.

10 Disposal

In the case of a disposal, the respective statutory requirements must be observed. In the following, information on the disposal of electrical and electronic devices in the United Kingdom and European Community are given.

Within the United Kingdom the disposal of electronic equipment is legislated by The Waste Electrical and Electronic Equipment Regulations 2013.

Within the European Community the disposal of electrically operated devices is regulated by national provisions that are based on the EU Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE).

Accordingly, in both United Kingdom and the European Community, all devices supplied after August 13th 2005 in the business-to-business area, to which this product is classified, may no longer be disposed of with municipal or household waste. To document this, the devices are provided with the disposal label.

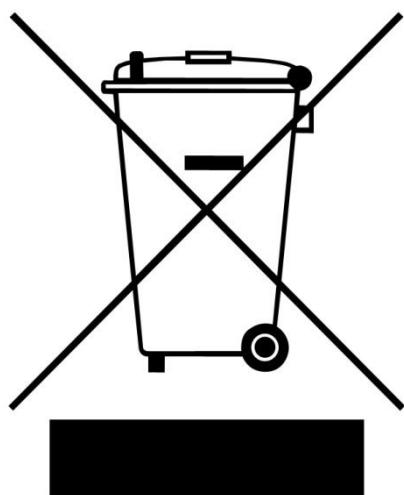


Fig. 12: Disposal label

Since the disposal regulations worldwide and within the EU may differ from country to country, the supplier of the device should be consulted directly in case of need.

As per the above United Kingdom and European Community regulations, the manufacturer must provide an adequate possibility of returning all devices delivered since August 13th 2005. For all devices delivered before August 13th 2005 the end user is solely responsible for the proper disposal.



11 Index

A

Accessories	40
Accessories included with delivery	24
Add-on weight	42
Ambient temperature	25, 26
Amendment status	6
Amperage	23
Amplitude	18
Anti-vibration feet	22
Applications	17
Area of application	17
Avoiding damage to property	14

B

Back	22
Bar code	23

C

Calibration	39
Calibration and Inspection Service	41
Cam buckles	21
Capacity	23
CE marking	23
Certificate	41
Clamp plate	21
Clamping belt system	30
Clamping device	17
Clamping latch	21
Cleaning	36
Cleaning of test sieves	37
Cleaning the outside of the device	37
Complaints	24, 25
Condensation	25
Confirmation form for the operating company	15
Conformity	17
Connecting the device to the power supply	28
Continuous operation	35
Controlling the device	34
Copyright	6

D

Degree of protection	18
Device designation	23
Dimensions	17
Disclaimer	6
Disposal	43
Disposal label	23, 43
Dry sieving	17

E

Electrical connection	27
Electromagnetic compatibility (EMC)	18
Emergencies	13
Emergency stop switch	12
Emissions	19
Equivalent continuous sound level	20
Explanations of the safety instructions	7

External fuse	27
---------------------	----

F

Feed material	17
Feed Particle Size	19
First commissioning	27
Floor space	17
Frequency	27
Front	21
Functions	34
Fuse	12, 38
Fuse drawer	22
Fuse replacing	38
Fuse strength	23
Fuse type	23

G

General catalogue	40
-------------------------	----

H

Hearing damage	19
Humidity	26

I

Improper use	10
Installation	24
Installation height	26
Installation of Sieve Clamping Unit	29
Installation site conditions	25

L

L.E.D.	21, 34
Latch	24
L_{eq}	20
Location plate	21
Location requirements	26
Long-term operation	17

M

Mains connection	22
Mains frequency	23
Mains supply	27
Mains switch	22
Maintenance	15, 36, 39
Manual	6, 9, 15
Manufacturer's address	23
Materials	9
Maximum relative humidity	26
Model	17

N

Notes on the manual	6
Number of fractions	17

O

Obligations of the operating company	10
On / Off switch	21, 34
Operating controls	34

Operating instructions	15
Operating the device	31
Operation	17
Organic solvents	36
P	
Packaging	24
Part number	23
Particle size distribution	9
Particle size range	9, 19
Payload	17
Performing a Test Sieving Operation	33
Personal protective equipment (PPE)	11
Personal protective equipment (PPE)	11
Personnel	10
Plate clamp assembly	24
Plug	21
Power connection	18
Power consumption	18
Power version	23
Preventing risks	13
Principle of operation	16
Process	
start	34
stop	34
Process timer	21, 34
Provisions	10
Q	
Qualification of personnel	11
R	
Range	17
Range of application of the device	17
Receiver	22
Receptacle volume	18
Repair	36, 38, 39
Repair instructions	12
Return	24
Return form	39
Returning device	43
Returning for repair and maintenance	39
S	
Safety	9
Safety equipment	12
Sample quantity	17
Sealing gaskets	
wear	38
Serial number	23
Service address	12
Sieve diameter	17
Sieve stack	21
height	29
weight	17
Sieve stack height	17
Sieving aids	41
Sieving motion	17
Sieving noises	19
Sieving time	
optimum	35
Signs	7
Small accessories	40
Sound level	19
Sound parameters	20
Spare parts	40
Strap	21, 24
Structural modifications and repairs	12
Switching on / off	32
Symbols	7
T	
Target group	9
Technical data	17
Temperature fluctuations	25
Temperature range	25
Temporary storage	25
Test sieve	9, 40
cleaning	37
diameter	29
drying	37
maximum drying temperature	37
selection	33
wear	38
Time	35
Time display setting	17
Transport	24
Transport damage	25
Type plate	22, 23, 27
description	23
U	
UKCA marking	23
Use of the device for the intended purpose	9
V	
Vibrations	26
Vibratory sieving operation	16
Views of the device	21
Voltage	18, 24, 27, 38
Volume of material	18
W	
Warning	7
Information	8
Warranty claim	24
Wear	36, 38
Wear parts	40
Weight	17, 23
Wet sieving	17
Workplace related emission level	20
Y	
Year of production	23



EU Declaration of Conformity

Original

VIBRATORY SIEVE SHAKER

Minor 200 | MIN200/****

EU DECLARATION OF CONFORMITY

We, represented by the undersigned, hereby declare that the above device complies with the following directives and harmonised standards:

Machinery Directive 2006/42/EC

Applied standards, in particular:

DIN EN ISO 12100	Machine Safety - General Design Principles
DIN EN 61010-1	Safety Regulations for Electrical Measurement, Control, Regulation and Laboratory Devices

Electromagnetic compatibility 2014/30/EU (tested at 230 V, 50 Hz)

Applied standards, in particular:

EN 55011	Industrial, scientific and medical equipment - Radio-frequency disturbance characteristics - Limits and methods of measurement
DIN EN 61326-1	Electrical equipment for measurement, control and laboratory use - EMC requirements

Restriction of hazardous substances (RoHS) 2011/65/EU

Authorised person for compilation of the technical documentation:

Julia Kürten (Technical Documentation), Haan (Germany)

Furthermore, we declare that the relevant technical documentation for the above device has been prepared in accordance with Annex VII Part A of the Machinery Directive and we undertake to submit the documentation to the market surveillance authorities on request.

In the event of a modification of the device not agreed on by Endecotts Ltd, as well as the use of non-approved spare parts or accessories, this declaration loses its validity.

Endecotts Ltd

Hope, 09/2024

Tom Gould, Managing Director



UKCA Declaration of Conformity

Original

VIBRATORY SIEVE SHAKER

Minor 200 | MIN200/****

UKCA DECLARATION OF CONFORMITY

Herewith we declare, represented by the signatory, that the above mentioned device complies with the following directives and UK designated standards:

Supply of Machinery (Safety) Regulations 2008

Applied standards, in particular:

BS EN ISO 12100	Safety of machinery - General principles for design
BS EN 61010-1	Safety requirements for electrical equipment for measurement, control, and laboratory use.

Electromagnetic Compatibility Regulations 2016 (tested at 230 V, 50 Hz)

Applied standards, in particular:

CISPR 11	Industrial, scientific and medical equipment - Radio-frequency disturbance characteristics - Limits and methods of measurement
BS EN IEC 61326-1	Electrical equipment for measurement, control and laboratory use. EMC requirements

The Restriction of The Use of Certain Hazardous Substances in Electrical Electronic Equipment Regulations 2012

Authorised person for compilation of the technical documentation:

Hayley Davies (Production & Design Engineer)

In the event of a modification of the device not agreed on by Endecotts Ltd, as well as the use of non-approved spare parts or accessories, this declaration loses its validity.

Endecotts Ltd

Hope, 09/2024

Tom Gould, Managing Director

UK
CA

Endecotts



Copyright

© Copyright by
Endecotts Limited
Parsons Lane, Hope
Hope Valley, S33 6RB
England